

Concord 4

DISARMING SYSTEM.

- Press 1 at any keypad. Display reads "Enter Code"
- Enter (4) digit code. (1-2-3-4)
- System is now DISARMED.

ARMING SYSTEM – when staying home.

- Press 2 at any keypad. Display reads "Enter Code."
- Enter (4) digit code. Display reads "Armed to STAY."
- System is now ARMED with motion detectors bypassed.

ARMING SYSTEM – when exiting.

- Press 3 at any keypad. Display reads "Enter Code."
- Enter (4) digit code. Display reads "Armed to AWAY."
- Exit through delay door within 30 seconds.
- System is now ARMED.

BYPASSING ZONES – before setting alarm.

- Close all doors and windows that you do not want to be bypassed.
- Arm your system. Keypad will say "PROTEST."
- Press the bypass button.
- System will arm with the zone bypassed that currently has a window/door/device open.

DISARMING SYSTEM – after bypass.

- Press 1 at any keypad. Display reads "Enter Code"
- Enter (4) digit code.
- System is now DISARMED.
- Bypassed zone(s) automatically reset.

CHANGING SYSTEM MASTER CODE

- Enter programming menu by pressing 9 and Enter (4) digit code.
- Press B to User Codes.
- Press # then B two times to System Master Code then #.
- Enter new code then #.
- Exit by pressing * 00 #.

ADDING ADDITIONAL CODES

- Enter programming menu by pressing 9 and Enter (4) digit MASTER code. (display will read Time and Date)
- Press B to User Codes then # two times to User 000.
- Press B to desired user number (000-229) then #.
- Enter new 4 digit code then #.
- Exit by pressing * 00 #.

DELETING USER CODES

- Enter programming menu by pressing 9 and Enter (4) digit MASTER code. (display will read Time and Date)
- Press B to User Codes then # two times to User 000.
- Press B to desired user number (000-229) then #.
- Enter (4) digit MASTER code then # to erase.
- Exit by pressing * 00 #.

RESETTING SYSTEM – after being triggered

- Enter 1 then (4) digit code.
- Sirens will stop sounding
- Display will read "Alarm Cancelled"

SETTING TIME AND DATE

- To change the time enter programming mode by pressing 9 then Enter (4) digit MASTER code then 020.
- Enter correct time in 24 hour format (00:00) then press # to enter.
- Exit by pressing * 00 #.
- To change the date enter programming mode by pressing 9 then enter (4) digit MASTER code then 021.
- Enter correct date in 6 digit format (00/00/00) then press # to set.
- Exit by pressing * 00 #.

To turn chime on/off press 71