

## Concord Express

### DISARMING SYSTEM.

- Press 1 at any keypad. Display reads “Enter Code”
- Enter (4) digit code. (1-2-3-4)
- System is now DISARMED.

### ARMING SYSTEM – when staying home.

- Press 2 at any keypad. Display reads “Enter Code.”
- Enter (4) digit code. Display reads “Armed to STAY.”
- System is now ARMED with motion detectors bypassed.

### ARMING SYSTEM – when exiting.

- Press 3 at any keypad. Display reads “Enter Code.”
- Enter (4) digit code. Display reads “Armed to AWAY.”
- Exit through delay door within 30 seconds.
- System is now ARMED.

### BYPASSING ZONES – before setting alarm.

- Close all doors and windows that you do not want to be bypassed.
- Arm your system. Keypad will say “PROTEST.”
- Press the bypass button.
- System will arm with the zone bypassed that currently has a window/door/device open.

### DISARMING SYSTEM – after bypass.

- Press 1 at any keypad. Display reads “Enter Code”
- Enter (4) digit code.
- System is now DISARMED.
- Bypassed zone(s) automatically reset.

## CHANGING SYSTEM CODE

- Enter programming menu by pressing 9 and Enter (4) digit code.
- Enter 110.
- Enter new system code then press #.
- Press \* then 4 then # to exit programming menu.

### RESETTING SYSTEM – after being triggered

- Enter 1 then (4) digit code.
- Sirens will stop sounding
- Display will read “Alarm Cancelled”

## SETTING TIME AND DATE

- Enter programming mode by pressing 9 then entering (4) digit code then 00.
- Enter correct time in 24 hour format (00:00) then press # to enter.
- Exit by pressing \* then 4 then #.
- Enter programming mode by pressing 9 then entering (user code) then 01.
- Enter correct date in 6 digit format (00/00/00) then press # to set.
- Exit by pressing \* then 4 then #.

## TYPICAL ZONE LIST

- Zone 1 Front & Garage Door
- Zone 2 Motion Detector
- Zone 3 Front Windows/Door
- Zone 4 Rear Windows/Door
- Zone 5 Basement Windows/Door
- Zone 6 Panic or Fire

## Chime on/off press 71