

Arm System - when Exiting

- Keypad must read READY
- Enter 4 digit code
- Exit within 60 seconds

Change User Code

- Press CODE button
- Enter old 4 digit code
- Enter 1 (MASTER USER ID)
- Enter new 4 digit code

Arm System - when Staying Inside

- Keypad must read READY
- Press STAY Button and enter 4 digit code
- Motion detector is now bypassed

Add Additional Codes

- Press CODE button
- Enter 4 digit master user code (user 1)
- Enter 2 or (2 to 6)
- Enter new 4 digit code

Arm System - when Staying Inside with no entry

- Keypad must read READY
- Press STAY, INSTANT & 4 digit code
- Motion detector is now bypassed
- Entry /exit delay is off

Delete Codes

- Press CODE button
- Enter 4 digit master user code (user 1)
- Enter 2 or (2 to 6) user to delete
- Press # to delete

Bypass a zone - when system is not ready

- Press BYPASS and 4 digit code
- Enter zone to be bypassed
- Arm system (see above 3 choices)

24 Hour Panic / Hold-up Alarm

- Press \* and # at the same time for 1 Sec.
- If connected to Central Station the
- Police will dispatched.
- If not connected to Central Station only the siren will sound.

Disarm System

- Enter 4 digit code
- Alarm is now off

Reset or Silence System

- Enter 4 digit code
- Look at keypad for information

Z O N E L I S T
1. ENTRY/EXIT DOORS
2. FRONT MOTION DETECTOR
3. FRONT WINDOWS
4. REAR WINDOWS/DOORS
5. BASEMENT WINDOWS/DOORS
6. SMOKE & HEAT DETECTORS

RED L.E.D. = A/C POWER AND BATTERY IS GOOD

GREEN FLASHING L.E.D. = A/C POWER IS OFF OR BATTERY IS LOW

RED L.E.D. = SYSTEM IS ARMED

\* Your system may or may not be connected to a 24 hour central station.

\* Central station connection is available for every system @ \$21.95 per month / \$263.40 for one year.