

XL-2T NATIONAL SECURITY SYSTEMS 908.526.7778
 166 WEST END AVE. Somerville, NJ 08876
 nationalsecurity@msn.com

Arm System - when Exiting

- Keypad must read READY
- Enter 4 digit code
- Exit within 60 seconds

Arm System - when Staying Inside

- Keypad must read READY
- Press STAY Button and enter 4 digit code
- Motion detector is now bypassed

Disarm System

- Enter 4 digit code
- Alarm is now off

Arm System - when Staying Inside with no entry

- Keypad must read READY
- Press STAY, INSTANT & 4 digit code
- Motion detector is now bypassed
- Entry /exit delay is off

Bypass a zone - when system is not ready

- Press BYPASS and 4 digit code
- Enter zone to be bypassed
- Arm system (see above 3 choices)

Reset or Silence System

- Enter 4 digit code
- Look at keypad for information

Change User Code

- Press CODE button
- Enter old 4 digit code
- Enter 01 (MASTER USER ID)
- Enter new 4 digit code

Add Additional Codes

- Press CODE button
- Enter 4 digit master user code (user 01)
- Enter 02 or (02 to 15)
- Enter new 4 digit code

Delete Codes

- Press CODE button
- Enter 4 digit master user code (user 01)
- Enter 02 or (02 to 15) user to delete
- Press # to delete

24 Hour Panic / Hold-up Alarm

- Press * and # at the same time for 1 Sec.
- If connected to Central Station the Police will dispatched.
- If not connected to Central Station only the siren will sound.

Chime Feature

- Press #6 to turn chime on.
 - Press #6 to turn chime off.
- This will chime when door or window is open.

Z O N E L I S T
1. ENTRY/EXIT DOORS
2. FRONT MOTION DETECTOR
3. FRONT WINDOWS
4. REAR WINDOWS/DOORS
5. BASEMENT WINDOWS/DOORS
6.
7.

YELLOW L.E.D. = A/C POWER AND BATTERY IS GOOD
 GREEN FLASHING L.E.D. = A/C POWER IS OFF OR BATTERY IS LOW
 RED L.E.D. = SYSTEM IS ARMED

* Your system may or may not be connected to a 24 hour central station.
 * Central station connection is available for every system @ \$21.95 per month / \$263.40 for one year.